

Finding Speaker code for Gm data link radio

The radio you order will be coded to just plug and play in your vehicle
No dealer needed to code the radio, once plugged in the radio will learn
your Vin number, and then will only work in that vehicle, to make sure the
Radio plays right it need to be coded to the right speaker system that in the
vehicle, we will need your speaker Code. To find the speaker
Code you will need to look at Service Parts Identification label that is
Found in the glove box,

Speaker codes

UQ3- STANDARD BASE SPEAKERS (NO EXTERNAL AMP)

UQ5- STEP UP SPEAKERS (NO EXTERNAL AMP)

UQ7- ANALOG BOSE AMP

UQA-SAME AS UQ7 (FOUND IN SOME SUV)

Y91-HALF DIGITAL BOSE AMP

Y92- FULL DIGITAL BOSE AMP

Radio codes

UM7-AM/FM STEREO


U1C-BASE MODEL AM/FM/CD

UBO/UNO-STEP UP AM/FM/CD


UB1/UPO-AM/FM/CASSCD

UC6- AM/FM/6 DISK

IN THE EXSAMPEL PHOTO BELOW, THE SPEAKER CODE IS A
UQ7 THE RADIO CODE IS UB1, THIS VEHICLE CAME WITH AM/FM/CASS/CD
RADIO WITH ANALOG BOSE AMP YOU WOULD ORDER A RADIO SET UP FOR
UQ7 YOU CAN GO BACK TO A CASS/CD OR UPGRADE TO A CD6 OR NAV RADIO.
YOU CANNOT USE A UM7, U1C, AND UBO OR UNO THESE WILL NOT TURN ON A
BOSE AMP.

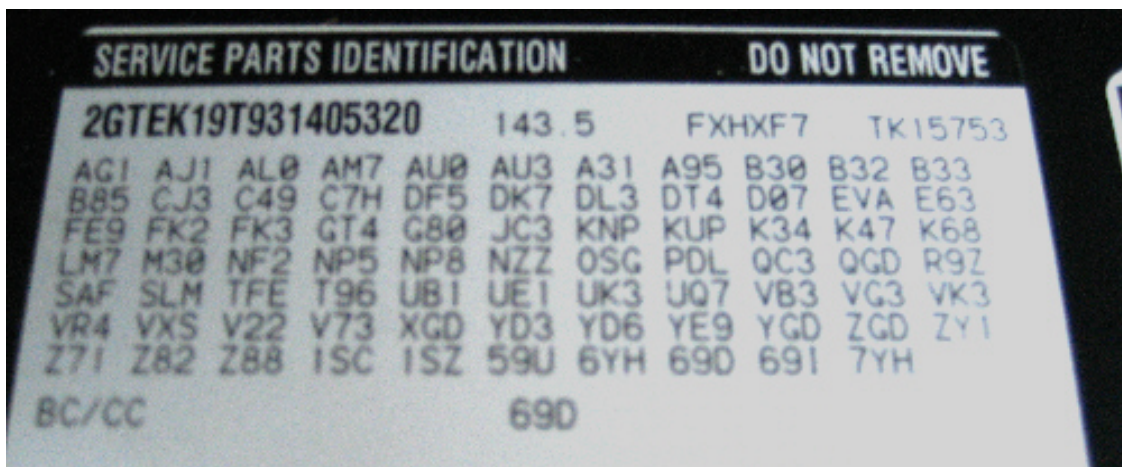

IN THE EXSAMPTEL PHOTO BELOW, THE SPEAKER CODE IS A UQ3 THE RADIO CODE IS UB1, THIS VEHICLE CAME WITH AM/FM/CASS/CD RADIO WITH BASE SPEAKERS NO AMP YOU WOULD ORDER A RADIO SET UP FOR UQ3/UQ5 YOU CAN GO BACK TO A CASS/CD OR UPGRADE TO A CD6 OR YOU CAN USE A UM7, U1C, AND UBO OR UNO. YOU CANNOT USE A NAV RADIO, NAV RADIOS REQUIER A BOSE AMP.

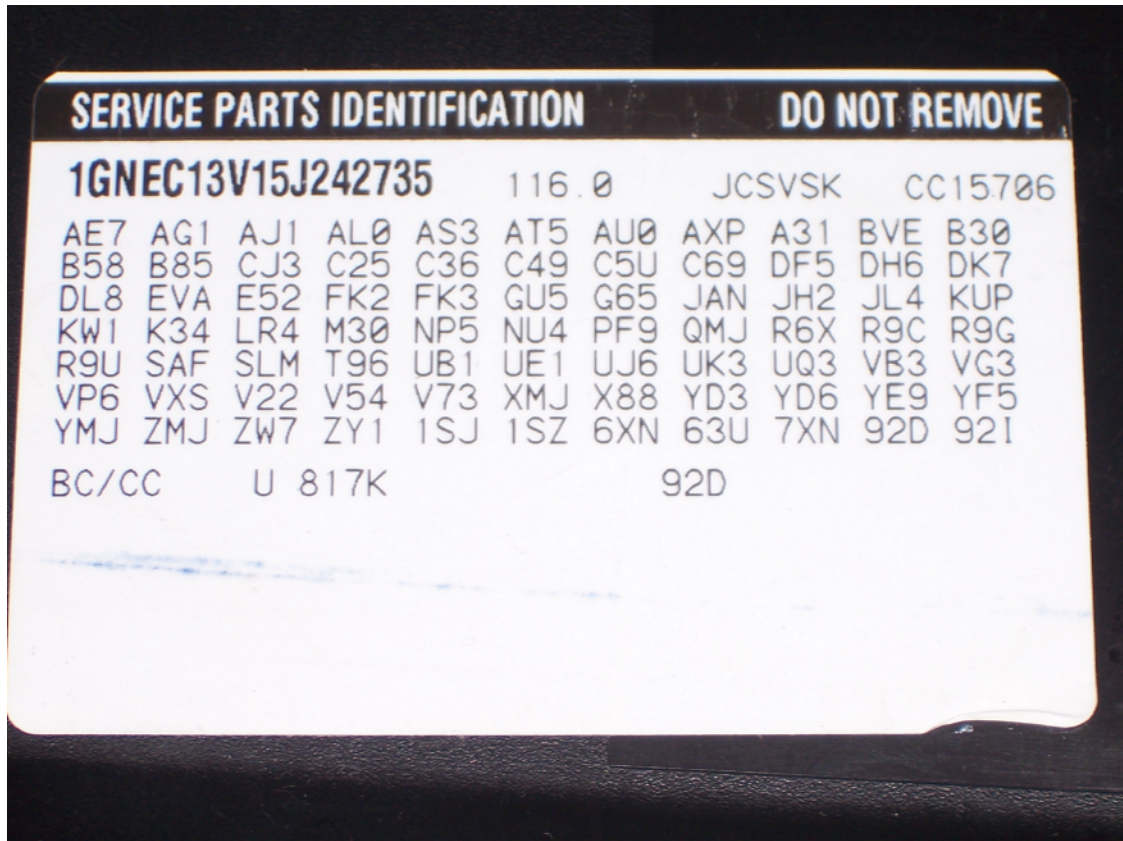

SOME SUV VEHICLES LIKE A TAHOE WILL ONLY HAVE THE RADIO CODE AND NOT A SPEAKER CODE, IF YOU HAD A CD6 RADIO WITH A ANOLAG BOSE SYSTEM YOUR CODES WOULD BE UC6 RADIO AND UQA SPEAKER, THE REPLACEMENT RADIO WOULD BE AM/FM/6DISK WITH A UQ7/UQA. IF YOU HAVE THE SAME TAHOE WITH OUT THE BOSE YOU MAY ONLY HAVE THE UC6 AND NO SPEAKER CODE, THE REPLACEMENT WOULD BE AM/FM/6 DISK WITH A UQ3/UQ5

WHAT WILL WORK IN YOUR VEHICLE

IF YOU HAVE A UQ3 OR UQ5 YOU CAN USE A UM7, U1C, UBO/UNO, UB1/UPO AND UC6
IF YOU HAVE UQ7, UQA, Y91 OR Y92 YOU CAN USE A UB1/UPO, UC6 OR A NAV

ON A Y91 OR Y92 YOU MAY ALSO HAVE THE UQ7/UQA THIS JUST MEANS THE UQ7/UQA STANDS FOR A BOSE SYSTEM, AND Y91 OR Y92 IS THE TYPE OF BOSE SYSTEM, JUST WRITE DOWN ANY OF THESE CODES YOU HAVE AND CONTACT US IF YOU NEED HELP

stergo@charter.net